


Technical Description and User Manual

BAMSTER XS Bluetooth Speaker

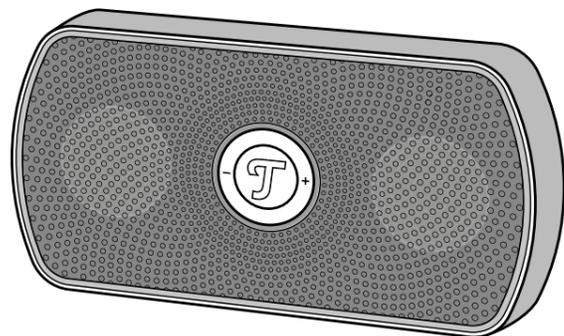

General Notes and Information



Before operating the BAMSTER XS, please first read the safety notes and user manual carefully. Only in this way, can you ensure that all functions are used in a safe and reliable manner. Store the user manual in a safe place and also be sure to pass it on to any subsequent owner.

Contact

Please contact our customer service with any questions, suggestions or criticism:

Lautsprecher Teufel GmbH

BIKINI Berlin

Budapester Str. 44

10787 Berlin (Germany)

Phone 00800 - 200 300 40 (toll-free)

Fax: +49 (0)30 / 300 930 930

Service: www.teufelaudio.com/service

Contact: www.teufelaudio.com/contact

Trademarks

© All trademarks are the property of their respective owners.

Bluetooth® and the Bluetooth symbol are trademarks of Bluetooth SIG, Inc.

Product contents

- 1 × BAMSTER XS
- 1 × USB cable (A plug to Micro B plug)
- 1 × AUX cable, 3.5 mm jack plug
- 1 × Felt bag with snap hook
- 1 × Silicon pad

- Check that all items have been delivered and that nothing is damaged.
- Should the delivery be incomplete or damaged in any way, please contact our customer service department (see “Contact”).
- Do not operate a damaged device.

For Your Safety

Proper use

The BAMSTER XS is designed for the playback of music and speech from an external player. The devices can be connected via Bluetooth or AUX cable.

Only use the BAMSTER XS as described in this user manual. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons.

The manufacturer accepts no liability for damage caused by improper use.

The BAMSTER XS is only intended for private use.

Safety notes

WARNING

Danger of explosion: Batteries (particularly lithium batteries) can explode if used improperly.

- Do not heat up the device, do not expose it to direct sunlight and do not dispose of it in a fire.

Health hazard: Swallowing the device battery may result in severe internal injury or even death.

- Do not open the housing and do not remove the rechargeable battery.
- If the housing is defective, stop using the device and store it in an area that is not accessible for children.
- If you suspect that a button cell battery has been swallowed or otherwise ingested, promptly consult a physician.

Health hazard: The BAMSTER XS permanently generates magnetic fields that may interfere with pacemakers and implanted defibrillators.

- Make sure that the BAMSTER XS and pacemaker/defibrillator are always at a minimum distance of 10 cm apart.

CAUTION

- Do not use the BAMSTER XS in
 - wet rooms or
 - environments with a risk of explosion.



- Protect the BAMSTER XS from
 - dripping and splashing water and
 - direct sunlight.
- Only use Bluetooth in locations where wireless transmission is permitted.

Extended listening at high volumes may lead to hearing loss.

To avoid damage to health, avoid extended listening at high volumes.


- When the volume is set high, always keep a certain distance from the device and never place your ear directly on the speaker.
- If the signal source device is set to full volume, it may produce very high sound pressure. This may have psychological consequences and also cause physical injury. Children and pets are particularly at risk. Set your signal source device volume control to a low setting before turning on the power.

Operational Controls and Connections

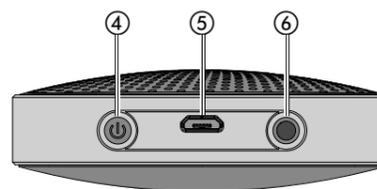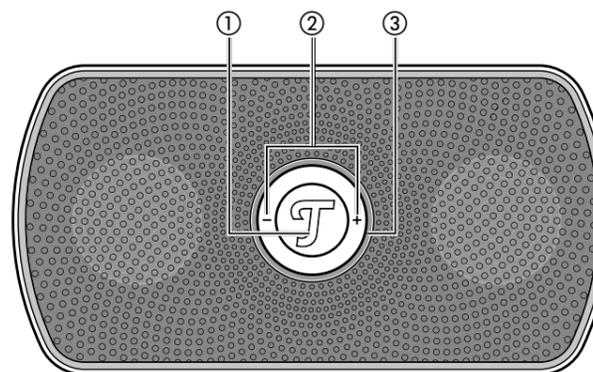

Item	Description
①	Push this button for 3 seconds: activate Bluetooth pairing or disconnect the Bluetooth connection. Briefly push this button in Bluetooth mode: Play/Pause.
② +/-	Increase (+) / decrease (-) the volume
③	LED light ring
④	On/Off switch
⑤	USB jack to charge the rechargeable battery and for the power supply
⑥	LINE IN jack (3.5 mm)

Charging the Rechargeable Battery

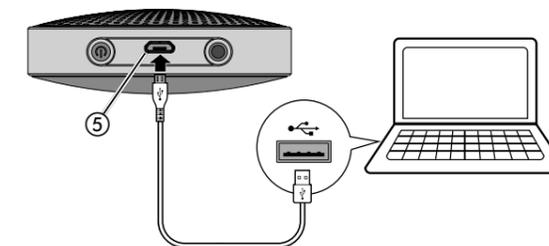

The rechargeable battery in your BAMSTER XS is charged via the USB cable. Charge it for approx. 3 hrs before first use.

- To charge the rechargeable battery, connect the USB jack ⑤ with the USB jack on your computer or standard USB charger. Use the enclosed USB cable for this.

During the charging process, the LED ring ③ will slowly pulse. Once the rechargeable battery has been fully charged, the LED ring ③ will be continuously illuminated.

Operation

Activating/deactivating

- Push the ④ button to switch the device on and off. When the BAMSTER XS is on, the LED ring ③ will glow red. When the battery is low, it will blink. The LED ring will not be illuminated after the device has been turned off.

Tip: You should always switch off the BAMSTER XS when it is not in use to save battery power.

Bluetooth® pairing

You can connect compatible devices, such as most smartphones, with your BAMSTER XS via Bluetooth® (pairing). The audio output of your smartphone is then emitted by the BAMSTER XS.

1. Push and hold the button ① for approx. 3 s. The LED ring ③ will now blink in blue.
2. Activate the Bluetooth function on your external player (e.g. smartphone).
3. Let your smartphone search for Bluetooth devices (you can find more information in the instruction manual of your smartphone). “Teufel BAMSTER XS” should also appear in the list of detected devices following the scan.
4. Select “Teufel BAMSTER XS” from the list of detected devices. If your external player requires the entry of a PIN code, enter the PIN code “0000” set by factory default. Pairing is now complete and your BAMSTER XS is linked to the external player. All tones that would otherwise be played by your external player will now be played back by the BAMSTER XS.

To terminate the Bluetooth connection, push and hold the  button  for approx. 3 s.

Reconnecting to a paired external player

- If your BAMSTER XS has already been connected with the external player, you don't have to enter pairing mode to establish a new connection. You can simply select it in the list of paired devices instead.

Connection via LINE IN

As an alternative to Bluetooth®, you can also connect your BAMSTER XS to the headphone jack of the external player for example via the enclosed AUX cable.

Select the cable connection if you do not wish or are not allowed to use the Bluetooth function.

- Bluetooth must be switched off for the transmission via LINE IN/AUX (push and hold the  button  for approx. 3 s).

Please note:

- In case of a LINE IN connection, you can not pause or start playback using the  button .

Phone calls with the BAMSTER XS

If your BAMSTER XS is connected with a compatible smartphone or mobile phone via Bluetooth, you can make the phone call with the BAMSTER XS. Music playback will be interrupted in the event of an incoming call and a ring tone will sound instead.

The following functions are available:

Accept incoming call	Briefly push the  button 
End the call	Briefly push the  button  again
Adjusting the volume	Buttons  +/–

Other functions

Automatic deactivation

When the BAMSTER XS is not being operated and you don't push any of its buttons, the BAMSTER XS will automatically switch off after approx. 15 minutes.

Interruption of connection

If your BAMSTER XS moves out of the range of your external player, the Bluetooth connection will be interrupted. The connection will be re-established automatically when you are back within range.

Using the silicon pad

Some furniture and surfaces can act as a soundboard when the Bamster XS is placed on them. For these situations, put the silicon pad under the Bamster XS to prevent bass vibrations.

Cleaning & Maintenance

NOTICE

Risk of damage: Liquid can destroy the electronics in your BAMSTER XS! Using unsuitable cleaning agents may damage the housing.

- Make sure that no liquids of any kind penetrate the device.
- Never use solvents or abrasive cleaners.

To clean your BAMSTER XS

- Turn the BAMSTER XS off and remove all cable connections before you start cleaning.
- Ideally, you can remove any dust or light dirt with a dry microfibre cloth.
- You can wipe off more stubborn dirt with a slightly damp cloth.
- Then immediately wipe the damp surfaces off with a soft cloth without applying pressure.

Protecting the Environment



Old devices must not be disposed of with household waste!

If the device is no longer operational, every consumer is required by law to dispose of old devices separately from household waste, e.g. at a collection point run by the communal authority/borough. This ensures that old devices are recycled in a professional manner and also rules out negative consequences for the environment.

For this reason, electrical equipment is marked with the following symbol.



Batteries and rechargeable batteries do not belong in the household waste!

Every consumer is required by law to bring all batteries and rechargeable batteries, regardless whether they contain harmful substances* or not, to a collection point run by the communal authority or borough or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Please only turn in batteries and rechargeable batteries which are empty!

* labelled with: Cd = cadmium, Hg = mercury, Pb = lead

Technical Data

- Max. output power: 4 dBm
- Power supply: 5 V, 2 A max
- Lithium battery: 3.7 V, 1300 mAh
- Dimensions (L×W×H): 140 × 72 × 23 mm
- Hardware Version: V2.0
- Firmware Version: V1.0
- Manufacturer:
Zhongshan City LITAI Electronic Industrial Co. Ltd.
3rd Industrial district,
Wuguishan, Zhongshan City
- Importer:
Lautsprecher Teufel GmbH
Budapester Str. 44
10787 Berlin (Germany)

You can find further technical data on our website. Technical changes reserved!

Declaration of Conformity



Lautsprecher Teufel GmbH hereby declares that this product is in accordance with the requirements of directives 2014/30/EU, 2014/35/EU and 2014/53/EU as long as it is installed and used according to the manufacturer's instructions. The full text of the EU Declaration of Conformity is available at the following Internet address:

www.teufelaudio.com/declaration-of-conformity.html

The following radio frequency bands and radio transmitters are used in this product:

Radio network	Frequency bands in Mhz	Transmitter power mW/dBm
Bluetooth	2400–2483.5	2.5/4

Lautsprecher Teufel GmbH
BIKINI Berlin
Budapester Str. 44
10787 Berlin (Germany)

Phone.: 00800 200 300 40 (toll-free)
Fax: +49 (0)30 - 300 930 930
Service: www.teufelaudio.com/service
Contact: www.teufelaudio.com/contact

Teufel