



# RAUMFELD

True Wireless High Fidelity

## Quick Start Guide

**Raumfeld Soundbar**

## 1 Unboxing

# Welcome to Raumfeld

Take a moment to ensure that all of the components listed below were included in delivery.

Before beginning setup or use of your new Raumfeld device, please read the Safety Notes included with the device.



Please keep the boxes for the duration of the warranty period.



### Note regarding first time installations


Begin the setup process with the Raumfeld Expand if you plan to use this device. The Raumfeld Expand is an optional device that can be purchased separately.

## 2 Ready your Wi-Fi

- Make sure that your Wi-Fi router has been activated, is using the latest software and has access to the internet.
- The router should be placed in a central location so that it can supply your entire household with a sufficient Wi-Fi signal.




During the setup process, it is important to ensure that all Raumfeld devices receive a sufficient Wi-Fi signal. A signal that is too weak can lead to dropped connections.

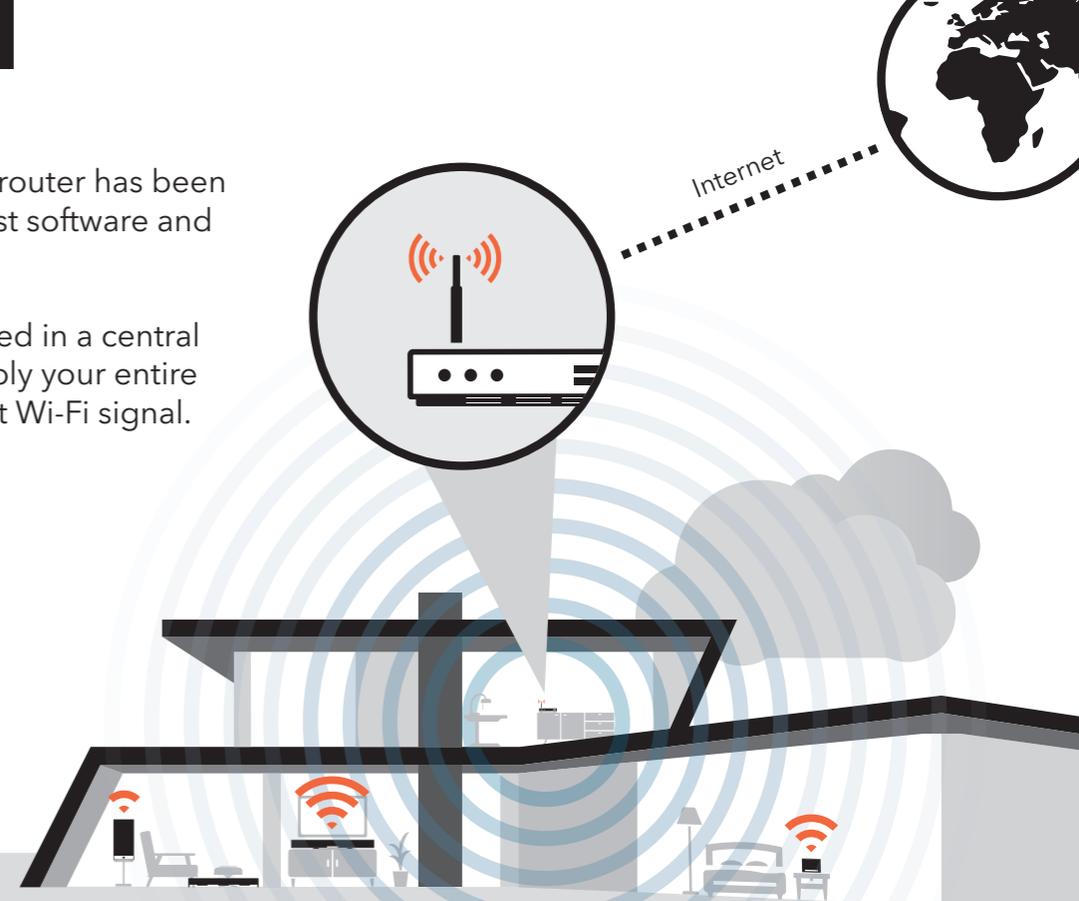


### 3 Speaker placement

- ◆ The Raumfeld Soundbar is ideally placed under a television and centrally aligned with the display.


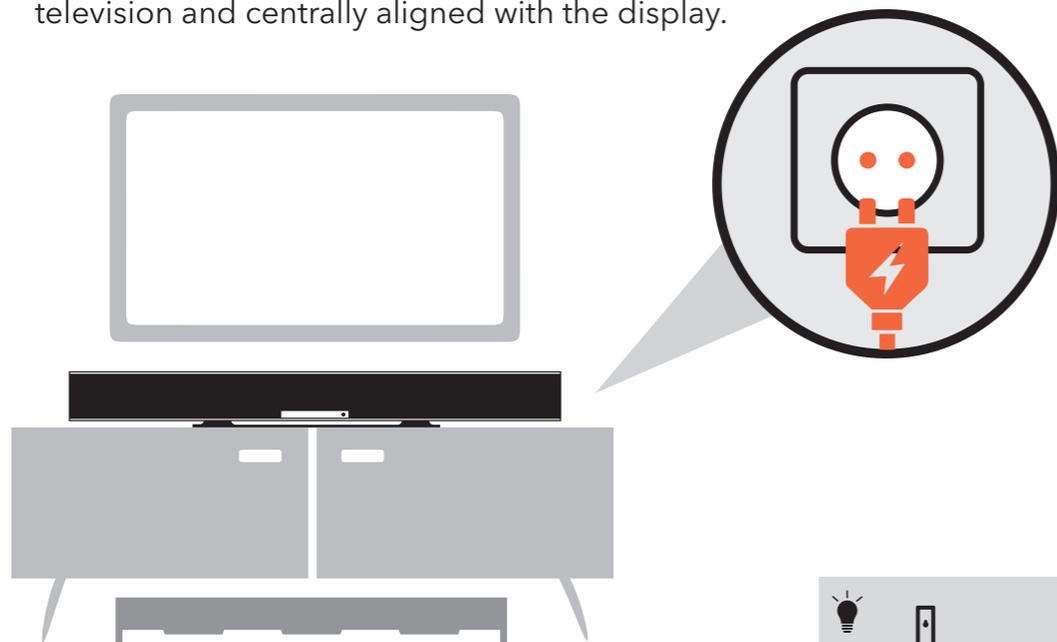


- ◆ Place the device as desired and plug in the power cord.

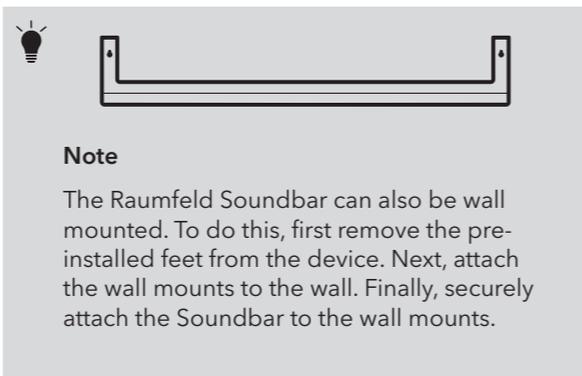


### 4 Connections

- ◆ Use the included HDMI cable to connect the Soundbar to your TV's HDMI ARC port.

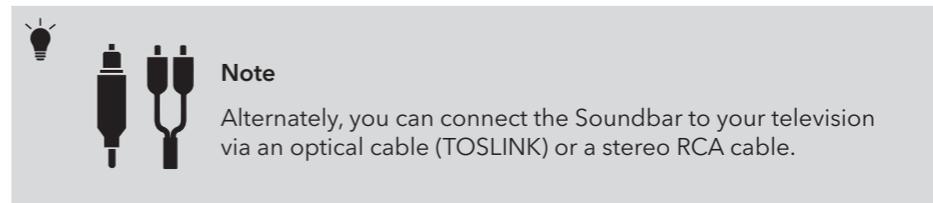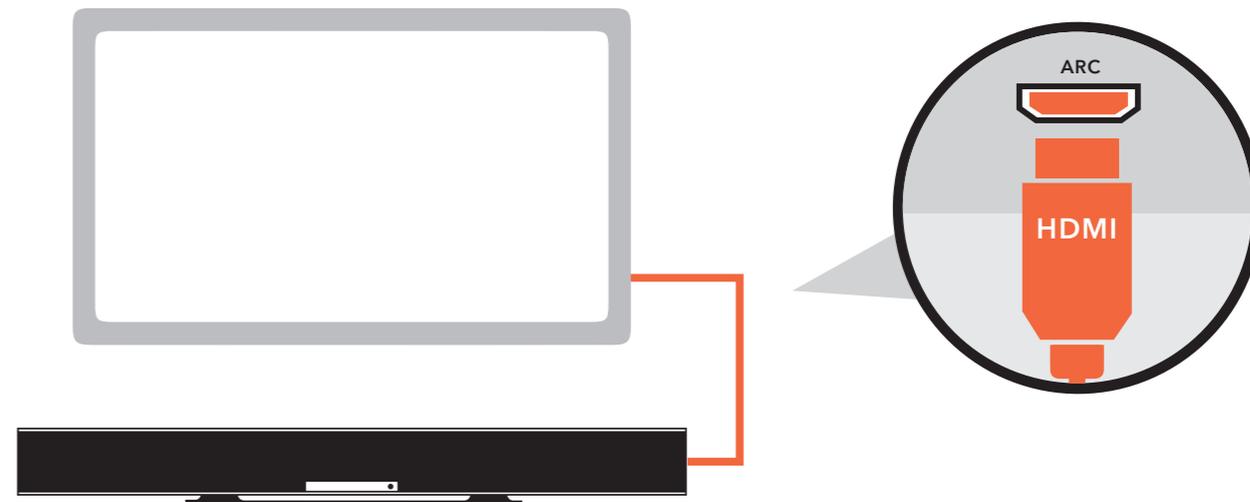

## 5 Getting started

- ◆ Check that your smart device is connected to your home Wi-Fi.
- ◆ Download the "Raumfeld Controller" App from the Play Store/App Store.

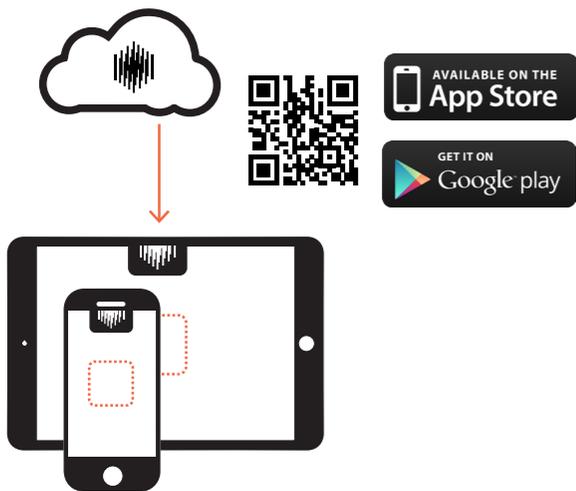


- ◆ Locate your Wi-Fi password and keep it ready.
- ◆ After starting the app, follow the directions step-by-step until the setup process is complete.



## 6 Subwoofer

- ◆ The subwoofer should be placed not far from the front of your seating area and close to the soundbar. Ensure that the wireless transmission is not affected by obstacles like walls.
- ◆ After plugging in the subwoofer's power cord, turn the switch on the back to the "ON" position.
- ◆ The soundbar connects to the subwoofer automatically. If this connection is disrupted, proceed as follows:  
Press the "Pairing" button on the back of the subwoofer until the LED begins to blink rapidly. Next, press the "Sub pairing" button on the back of the soundbar.

You'll know that a connection has been established when the LED on the subwoofer is permanently lit.

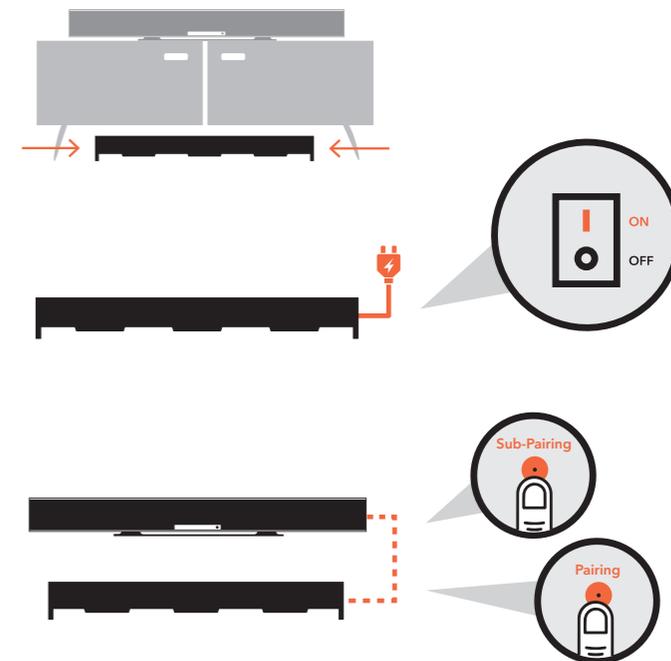

### Notes

- 1 If you already use a Raumfeld device, you can quickly and easily add new devices under the "Settings" menu option in the app. It is not necessary carry out the initial setup procedure again.
- 2 The Raumfeld Soundbar is designed for a HDMI cable connection to a television. If you plan to use another type of connection, this can be configured under the "Device Settings" menu option in the app.



### Note


Alternately, the subwoofer can be connected to the Raumfeld Soundbar with a mono RCA cable.

## 7 Remote control

During the initial setup, it is necessary to establish a connection between the remote control and the Raumfeld Soundbar.

- ◆ Remove the plastic strips on the bottom of the remote control.

- ◆ During the initial setup, the remote control must be held in the immediate vicinity of the soundbar. Press station buttons 1 and 4 simultaneously until the LED on the remote blinks three times. If the LED instead blinks 10 times in quick succession, you will need to carry out the procedure again.

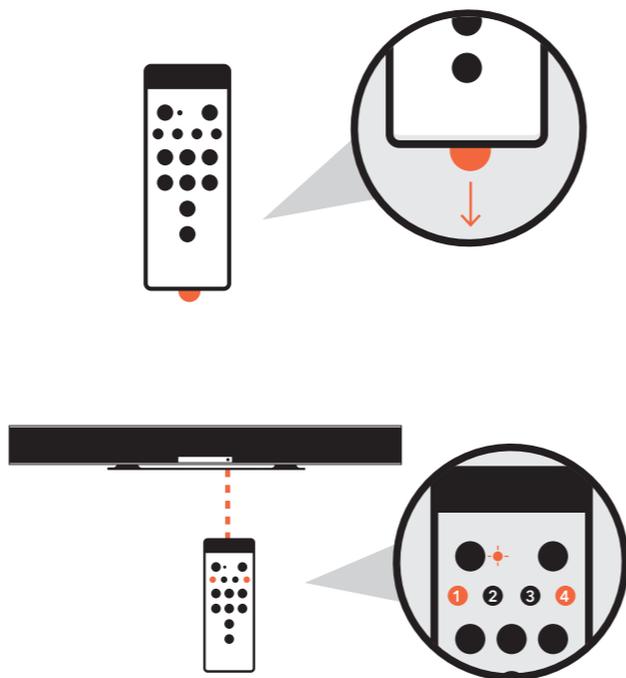

## Troubleshooting

- ◆ **The soundbar does not emit any sound in the TV mode or the playback skips.**

If the soundbar is connected to the television via HDMI or optical output, the television setting for the chosen TV output in the playback mode should be "PCM." Please ensure that the cable connecting the two devices is securely attached.

- ◆ **The LEDs don't light up.**

Please make sure that the device is connected to a power supply. Check that the power cord is properly plugged in to the power jack on your Raumfeld device.

- ◆ **After setup, my Raumfeld devices no longer, or only sporadically, connect to the Wi-Fi.**

Make sure that the Raumfeld devices and the smart device with the Raumfeld App are using the same Wi-Fi. If your router offers guest access, this should not be used for your Raumfeld system. Check that the Dynamic Host Configuration Protocol (DHCP) on your home router is activated and that all essential devices within the home network are able to communicate with each other.

- ◆ **The Raumfeld devices are connected to the network but playback is interrupted or skips.**

It is possible that one or more Raumfeld devices are receiving either too little or, at times, even no Wi-Fi signal. Try placing the device closer to the router, experiment with different placement locations or create a wired connection between the affected device and router via Ethernet cable. If possible, try streaming lower resolution audio files. In order to avoid network problems, we recommend the use of a Raumfeld Expand.

- ◆ **Where can I find additional information and help?**

Should you encounter unexpected problems or if you have additional questions, you'll find an extended FAQ section in the Raumfeld Online Manual at [manual.raumfeld.com](http://manual.raumfeld.com).

Raumfeld® is a registered trademark of Lautsprecher Teufel GmbH, used under licence.  
All rights reserved. Images may vary slightly from the actual products.

No part of this work may be reproduced, modified or otherwise used without prior  
written permission.

U.S. Pat. No. US 8,902,934 ©2015 Berlin Acoustics, Inc.

In the United States, Raumfeld products are sold and distributed by Berlin Acoustics,  
Inc., a Delaware corporation, and its authorized agents.

**Outside the United States, please contact:**

Lautsprecher Teufel GmbH  
BIKINI Berlin  
Budapester Strasse 44  
10787 Berlin - Germany

[www.raumfeld.com](http://www.raumfeld.com)

# Contact

**If you have any product related questions, need product support or have suggestions, please contact us at:**

## **Europe**

**Email /** [support@raumfeld.com](mailto:support@raumfeld.com)

## **Telephone**

DE/CH/AT +49 (0) 30 300 930 400  
NL +31 (0) 20 80 83 195  
DK +45 (0) 89 886 335  
SE +46 (0) 10 88 85 284  
FI +35 (0) 87 53 263 952  
NOR +47 (0) 81 503 272  
GB +44 (0) 33 08 080 489

**Other countries within the delivery area** (English spoken)

00800 200 300 40

## **USA**

**Email /** [us-support@raumfeld.com](mailto:us-support@raumfeld.com)

## **Telephone**

+ 1 888 98 31 276 (toll free)