 


Quick reference guide

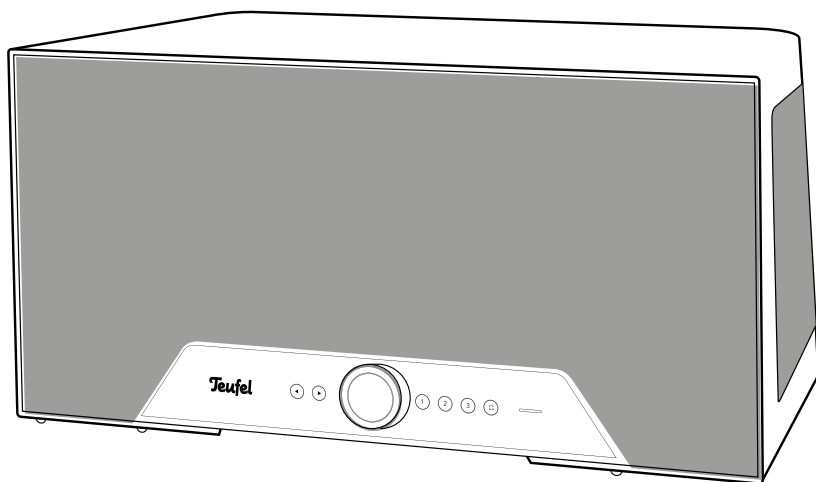

Teufel One M

POWERED BY  RAUMFELD



For detailed online documentation,
please visit

<http://manual.teufelaudio.com>

Teufel

Contents

General Notes and Information	2	Getting Started	6
Unpacking	3	Operation	7
Preparations	5	Troubleshooting	9
Setup	5	Declaration Of Conformity	11

General Notes and Information

Proper use

The speaker is designed for the playback of music and speech transmitted via cable or wirelessly from an external player.

Only use the speaker as described in this quick reference guide and the online documentation. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons.

The manufacturer accepts no liability for damage caused by improper use.

The speaker is intended for private use.

Safety notes

The enclosed brochure “Important product information” contains general safety notes which you should always observe to protect yourself and third parties. Also be sure to observe any warning notes contained in this quick reference guide.



 
Before operating the product, please first read the safety notes, this quick reference guide and the online documentation carefully. Only in this way, can you ensure that all functions are used in a safe and reliable manner. Keep the enclosed documents in a safe place and also be sure to pass it on to any subsequent owner.

Unpacking


Package contents

- (1) Teufel One M
 - (2) Mains cord
 - (3) Brochure “Important product information”
- Check that all items have been delivered and that nothing is damaged. If you find any damage, do not operate the device; instead contact our customer service department (see back side).
 - Please keep the packaging for the duration of the warranty period.

(1)

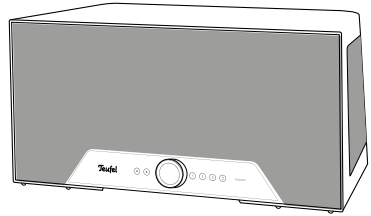

 (2)




(3)



Operational controls and connections


Front side

 - (4) Skip track forward/back
- (5) Turn: Adjust the volume.
Push: Pause/play.
Press and hold: Standby
- (6) Direct selection buttons
Push and hold: save current playback.
Tap: play saved music.
- (7) Control button
Tap to switch to the input LINE IN (9).
Refer to the online documentation for more possibilities to assign the control button:
<http://manual.teufelaudio.com/controlbutton>.
- (8) Control LED

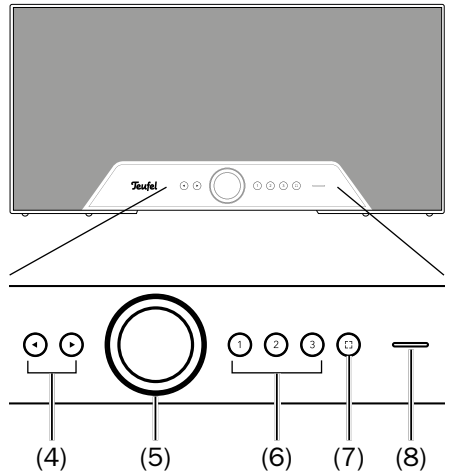

Back side top

 - (9) Audio input (3.5 mm jack) for external players via LINE-IN.
- (10) Network connection (LAN)
- (11) Reset button: hold for 8 seconds while the device is on to reset the speaker to the factory default settings.
- (12) USB 2.0 jack: for restoring the firmware and for sharing music *).
- (13) Setup button: push during the setup process once asked to do so.
- (14) Bluetooth pairing button: push briefly to set the speaker to pairing mode.
- (15) Connector jack for mains adapter

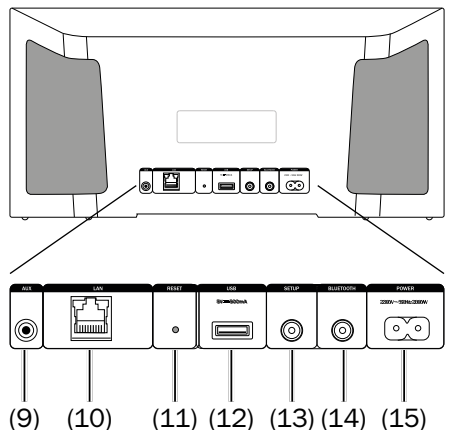

- *) Music saved on a USB stick is made available under “My music” if the stick is connected to the USB port of the host device. In the network settings, you can see which device acts as a host in your system.

Preparations

To be able to integrate Teufel Streaming products with Raumfeld technology in your network and to ensure smooth operation, we recommend an up-to-date, high performance router with a broadband Internet connection.

Make sure that the Wi-Fi router is active, has the latest firmware and is able to access the Internet.


To the extent possible, the router should be positioned in the middle of your home in order to ensure an adequate Wi-Fi signal throughout your home.

Setup

- Set up the speaker in the desired location and connect it to the mains supply with the mains cord (2).


Getting Started

- Make sure that your smartphone or tablet is registered in your home Wi-Fi.
- Have the Wi-Fi password for your router ready.
- Load the TEUFEL RAUMFELD APP from the Play Store/App Store.
- Once you have started the app, the setup wizard will guide you through the setup process.
- You can find more information about setting up your Teufel streaming system at <http://manual.teufelaudio.com/setup>. The tips in chapter „Troubleshooting“ auf Seite 9 should also be helpful.




TEUFEL RAUMFELD APP
IN THE APPLE APP STORE





TEUFEL RAUMFELD APP
IN THE GOOGLE PLAY STORE



 *Integration of other devices in an existing Teufel streaming system:*

- *You do not have to set up the entire system again. You can use the app to add new devices (under “Settings”).*

Operation

Standby

Your One M switches to standby mode after a few minutes of inactivity have elapsed. The timespan leading up to the beginning of the standby mode can be configured in the settings menu within the app. To manually send the device into standby mode, simply hold down the play/pause button (5) for about 2 seconds.

Preset buttons

Your One M has 3 programmable preset buttons (6). They allow you to access your favourite radio station, a playlist or any other music with just the push of a button.

Programming preset buttons

1. Make sure that the One M is operational.
2. Use the Teufel Raumfeld app to play any music on your One M (e.g. a radio station, an album, a playlist or all tracks of an artist).
3. As soon as the music is played back, push a preset button and hold it until you hear a signal tone. The played back music will be saved for this preset button.

Accessing saved content

- Tap the preset button to access saved music with just the push of a button and to play it back on the One M.

Control button

Various functions can be assigned to the control button (7) using the Teufel Raumfeld app. For a detailed description of the available functions as well as instructions on how to assign functions to buttons visit: <http://manual.teufelaudio.com/control-button>.

Spotify Connect

With Spotify Connect, you can play music on your mobile, tablet or PC on your One M via the Spotify app. Please note that you will require Spotify Premium to use Connect.

1. Connect your One M to your Wi-Fi network.
2. Open up the Spotify app on your phone, tablet or laptop using the same Wi-Fi network.
3. Play a song and select “Devices Available”.
4. Select your One M and start listening.

Connecting via Bluetooth®

You can connect compatible devices such as most smartphones and tablets to your One M via Bluetooth® (pairing). The sound of the smart device is then played by the One M.

1. Turn on the Bluetooth® function on your smart device.
 2. Tap the Bluetooth pairing button (14) on the back side of the speaker. The Bluetooth LED in the button will now blink until pairing is complete (no more than 60 seconds).
 3. Let your smartphone search for Bluetooth® devices (you can find more information in the user manual of your smart device). “Teufel One M” should also appear in the list of detected devices following the scan.
 4. Select “Teufel One M” from the list of detected devices. If your smart device requires the entry of a PIN code, enter the PIN code “0000” set by factory default.
 5. Pairing is now complete and the smart device is linked to the One M. The One M will now play back all sounds that would otherwise be played by your smart device.
- To terminate the Bluetooth® connection, switch the Bluetooth® function on your smart device off.

Troubleshooting


The following advice should help you to solve problems. If this does not work, our online documentation will provide help:

<http://manual.teufelaudio.com>

Problem	Possible cause/solution
The control LED is not illuminated.	Make sure that power is supplied. Check to make sure that the mains cord is securely seated.
Setup fails.	Restart your router and your smartphone or tablet. Set up the device near your router and switch any repeaters off for the duration of the setup process. If your router provides guest access, do not use it to connect your Teufel streaming devices. Read the notes in our online documentation at: http://manual.teufelaudio.com/setup .
The app is not connected or fails to locate the configured streaming devices.	Make sure that the Teufel streaming devices and the smart device are operated with the Teufel Raumfeld App on the same Wi-Fi. Restart your router. Briefly disconnect your Teufel streaming devices from the power supply and then start them again. You can find more information in our online documentation: http://manual.teufelaudio.com .
I would like to reset the device.	Notice: By resetting the device, all system configuration settings will also be reset. Resetting the device: When the device is switched on, use a paper clip that has been bent straight to push the reset button (11) and hold it down until the device restarts (for at least 8 seconds).

<p>Music playback skips or is interrupted.</p>	<p>It is possible that one or more Teufel device(s) do not have a Wi-Fi signal or it is too weak.</p> <p>Place the devices closer to the router, try alternative setup locations or connect devices, which are set up far away, with an Ethernet cable. In the event of problems with multi-room systems with three or more devices, we recommend connecting at least one of the devices with an Ethernet cable and setting it as the host.</p> <p>As a test, refrain from using repeaters. If applicable, use an audio stream with low resolution.</p> <p>Also visit the website of the router manufacturer for tips on how to improve your Wi-Fi.</p> <p>You can find more information in our online documentation: http://manual.teufelaudio.com.</p>
--	--

Declaration Of Conformity

 Lautsprecher Teufel GmbH hereby declares that this product complies with the requirements of the directives 2014/30/EU, 2014/35/EU and 2014/53/EU to the extent they are installed and used in accordance with the instructions of the manufacturer. The full text of the EU declaration of conformity is available at the following Internet address:

www.teufelaudio.com/declaration-of-conformity.html

The following radio frequency bands and radio transmitting powers are used in this product:

Radio network	Frequency band in MHz	Max. transmission power in mW/ dBm
Bluetooth	2400–2483.5	2.5/4
Wi-Fi 2.4 GHz	2412-2472	40/16
Wi-Fi 5 GHz	5180–5320; 5500– 5700; 5745–5825	25/14

You can find further technical data about the product on our website.

Teufel

Please contact our customer service department with any questions, suggestions, or complaints:

Lautsprecher Teufel GmbH

BIKINI Berlin

Budapester Str. 44

10787 Berlin (Germany)

Telephone: +44 33 08 08 04 89

Other countries: 00800 200 300 40

Online support: <http://manual.teufelaudio.com>

Contact form: www.teufelaudio.com/contact

No responsibility is assumed for the correctness of this information.
Technical changes, typographical errors and other errors reserved.