


Technical Description and User Manual

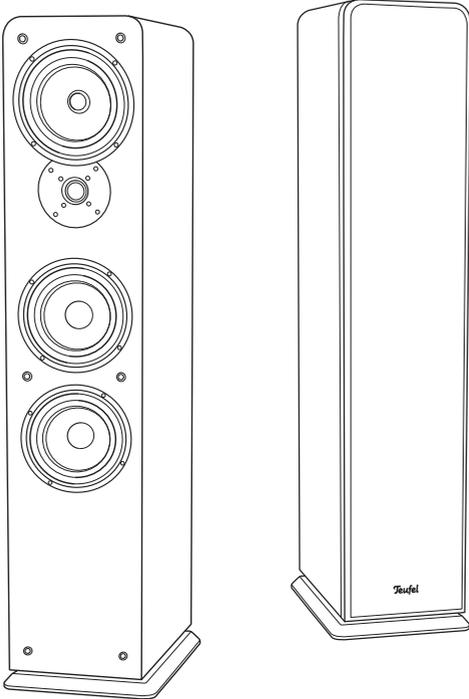

Ultima 40

Stereo column speaker

Teufel

Contents

General Notes and Information	3
For Your Safety.....	4
Unpacking and Setup.....	6
Connecting.....	8
Care and Cleaning.....	10
Protecting the Environment	11
Technical Data	11



Before operating the speakers, please read the safety notes and user manual carefully. Only in this way, you can ensure that all functions are used in a safe and reliable manner. Store the user manual in a safe place and also be sure to pass it on to any subsequent owner.

General Notes and Information

Notice

The information in this document may change without prior notice and in no way constitutes any liability on the part of Lautsprecher Teufel GmbH.

No part of this user manual may be reproduced in any form or be broadcasted in any way electronically, mechanically, by photocopy or recording without the written permission of Lautsprecher Teufel GmbH.

© Lautsprecher Teufel GmbH
Version 3.0, July 2018

Original packaging

If you wish to exercise your eight-week right of return, we ask that you be absolutely sure to hold on to the packaging. We can only accept the return of the speakers WITH THE ORIGINAL PACKAGING.

Empty boxes are not available!

Complaints

In case of a complaint we will need the following information to process your enquiry:

1. Invoice number

Can be found on the sales slip (enclosed with the product) or on the order confirmation received as a PDF document, e.g. 4322543

2. Serial number or batch number

Located on the back side of the device, e.g. serial no.: KB20240129A-123.

Thank you for your support!

Contact

Please contact our customer service with any questions, suggestions or criticism:

Lautsprecher Teufel GmbH
BIKINI Berlin
Budapester Str. 44
10787 Berlin (Germany)

Phone 00800 - 200 300 40 (toll-free)

Fax: +49 (0)30 / 300 930 930

Service:

www.teufelaudio.com/service

Contact:

www.teufelaudio.com/contact

For Your Safety

Proper use

The speakers are designed for the playback of audio signals that are transmitted by an external amplifier via a speaker cable.

Only use the speakers as described in this user manual. Any other use will be deemed as not in accordance with the instructions and may lead to damage of property or even persons.

The manufacturer accepts no liability for damage caused by improper use.

The speakers are intended for domestic use.

Explanation of terms

You will encounter the following signal terms in this user manual:

WARNING

This signal term indicates a moderate risk, which, if not avoided, may result in death or severe injury.

CAUTION

This signal term indicates a low risk, which, if not avoided, may result in minor or moderate injury.

NOTICE

This signal term warns you of potential damage.

Safety notes

This chapter contains general safety notes which you should always observe to protect yourself and third parties. Also observe the warning notes in each chapter of this user manual.

An unsuitable setup location may result in injury and damage.

- *If the speakers are not securely mounted, do not use them in vehicles, in unstable locations, on wobbly tripods or furniture, on underdimensioned brackets etc. The speakers may tip or fall over and cause injury to persons or be damaged themselves.*
 - *Place the speakers on the ground only.*
 - *Place the speakers in such a way that they cannot be knocked over inadvertently and make sure that the cables do not pose a tripping hazard.*
 - *Do not place the speakers near heat sources (e.g. heaters, ovens, other heat generating equipment such as amplifiers etc.).*
- Children can become trapped in the plastic wrapping when playing and suffocate.**
- *Do not allow children to play with the device or the plastic wrapping. There is a danger of suffocation.*

- *Ensure that children do not remove small parts from the unit or take them off of the unit (e.g. control knobs or plug adapters). They could swallow the parts and choke.*

Extended listening at high volumes may lead to hearing loss.

To avoid damage to health, avoid extended listening at high volumes.

- *When the volume is set high, always keep a certain distance and never hold your ears directly on the speaker.*
- *If an amplifier is set to full volume, this may produce very high sound pressure. This may have psychological consequences and also cause physical injury. Children and pets are particularly at risk. Set the volume control of your amplifier to a low setting before you turn it on.*

This product contains magnetic material.

- *If necessary, consult your physician and ask for effects on implants such as pacemakers or defibrillators.*

If the speakers are subjected to warm temperatures after being cold – (e.g. after transport), condensation may occur inside of them.

- *In this case, wait at least 2 hours before you connect and activate the speakers.*

Improper handling of the speakers may result in damage or fire.

- *Do not place open flames such as burning candles or similar on the speakers.*
- *Ensure sufficient ventilation.*
- *Do not expose the speakers to direct sunlight.*
- *Only use the speakers in indoor areas.*
- *Do not use the speakers in wet rooms and protect them against dripping or spraying water. Make sure that no vases or other liquid-filled objects are located on or near the speakers in order to prevent liquid from penetrating the housing.*

If the amplifier is underdimensioned, the amplifier may end up in clipping operation at high volumes, which could destroy the tweeters.

- *Only connect your speakers to amplifiers, which suit the output of your speakers.*

An overdimensioned amplifier can destroy the bass speakers due to excessive volume.

- *If the music playback sounds distorted, reduce the volume.*

Unpacking and Setup

Unpacking

- Carefully open the boxes, take out the EPE foam parts and carefully lift the speakers out of the box without touching the diaphragms.

i Due to diverse different customer requirements, the Ultima 40 series is shipped without any speaker cables. You can find suitable cables in our webshop (www.teufelaudio.com) in the “Accessories” area.

NOTICE

- *Check that all items have been delivered and that nothing is damaged. If you find any damage, do not operate the device; instead contact our customer service department.*


Location tips

- Select a stable, level base.
- Make sure that the environment is clean and free from dust.
- Select a location away from heat sources and direct sunlight.
- Lay the connector cords so that they do not pose a tripping hazard.
- Do not place any heavy objects on the cables or the speakers.

Positioning the speakers

The following data concern an “ideal listening room”, in which the listener sits in a central position at a sufficient distance in front of the speakers (see the graphic) and no objects (tables or the like) are located in between. Unfortunately, the room, furnishings or other circumstances do not always allow for optimum arrangement.

Modern amplifiers offer a variety of possibilities for electronically compensating losses associated with the arrangement. The following general rule applies: You can always experiment on what works best in your listening room in terms of sound and appearance based on our recommendations. Let your ears (and eyes) decide!

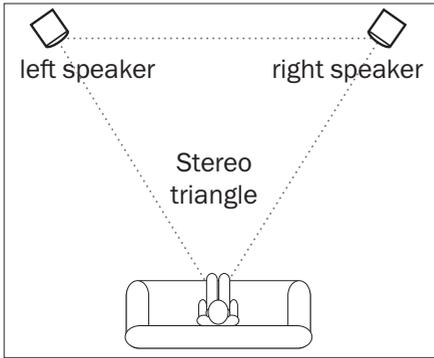

The speakers should be situated to the left and right of the listener and if possible, form an equilateral triangle with the listener – the so-called stereo triangle (distance from the listener = distance between the speakers). The speakers should project sound straight into the room or be arranged slightly towards the listener.

Removing the protective grids


You can take the protective grids off of the speakers by carefully reaching behind the protective grids and slowly pulling them off to the front.

By removing the protective grid, especially high frequencies will sound clearer.

When putting the protective grids on, please make sure that the installation pins slide directly into the corresponding jacks on the speaker.

Connecting

Connection variations

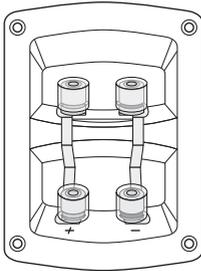

On the back of the speakers is a connection terminal with four clamps. Here you can connect the speaker cables directly or using pin plugs. Only the direct connection is described here.

The terminals are marked in red (+) and black (-).

In addition to normal connection where each speaker column is connected to the amplifier with a cable, you can also select the variations “bi-wiring” or “bi-amping”.

Normal connection


With this method, the Ultima 40 speakers are connected like conventional speakers with one 2-strand speaker cable each. The contact bridges between the connector terminals must not be removed; you can connect the speaker cables accordingly to the top or bottom terminals.

Bi-wiring

In the process, the high and mid range speakers with a speaker cable and the two low tone speakers with a second speaker cable are connected.

Bi-amping

Here, the high/mid-range and low range speakers are each supplied with their own power amplifiers.

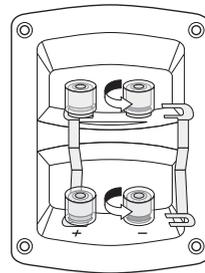

You must remove the contact bridges for bi-wiring or bi-amping operation only:

To do this, loosen the connector terminals by turning them anticlockwise and pull the contact bridges out. The upper terminals lead to the high and mid range speakers and the bottom terminals lead to the low range speakers.

Connecting the cables

CAUTION

Risk of tripping!


– Lay the cables so that they do not pose a tripping hazard.

1. Turn your amplifier off.
2. Lay the speaker cable from your amplifier to each speaker. Use a high-quality double wire speaker cable with marked strands for this. The cable should have a diameter of at least 1.5 mm².


NOTICE

Make sure the polarity is correct!

– Connect each of the like coloured terminals of your speakers and your amplifier with one another; otherwise the sound quality will suffer. To facilitate this, the individual single wires of the speaker cables are marked with different colours or shapes.

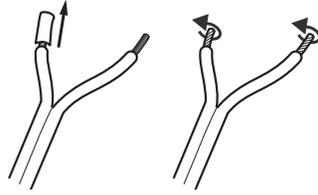

3. Split the single wire down by approx. 30 mm on both ends and remove approx. 10 mm of insulation each. Twist the stripped wire ends so that no strands are protruding.

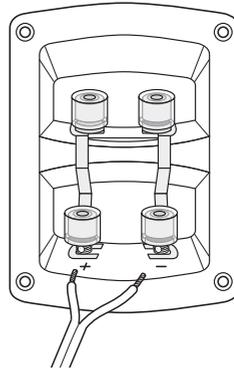

4. Turn the connector terminals anticlockwise until loose. Insert the stripped ends of the single wires in the holes that are now visible. Close the terminals by turning them clockwise. The speaker cable has now been clamped in place.
5. Connect the other end of the speaker cables to your amplifier. You should be able to find corresponding notes in the user manual of your device.

Care and Cleaning

The veneered surfaces of our speakers have a protective surface coat so they no wood polish is necessary.

NOTICE

External influences may damage or destroy the device.

- If possible, only use plain water without any additives. In case of stubborn marks, a mild soap solution may be used.*
- Do not use caustic cleaning products, white spirit, thinners, petrol or similar under any circumstances. Such cleaning agents may damage the delicate surface of the housing.*

- Ideally, you should remove dust or small amounts of dirt with a dry, smooth leather cloth.
- Rub off stubborn dirt with a damp cloth. Make sure that no liquid penetrates the speakers.
- Then immediately wipe the surfaces dry with a soft cloth without applying pressure.

Protecting the Environment



Old devices must not be disposed of with household waste!

Electrical equipment contains harmful substances and valuable resources.

Every consumer is required by law to bring all old electrical devices to an authorised collection or return point so that they can be disposed of in a manner that is environmentally friendly and which preserves resources.

You can hand old electrical devices over to the local reusable materials/recycling centre.

Please contact your vendor directly for more information about this topic.

Technical Data

Impedance:	4–8 Ohm
Sinus power:	120 Watt (longterm), 200 Watt (shortterm)
Recommended cross-over frequency when using a subwoofer:	40 Hz
X-over frequencies:	540 Hz, 2900 Hz
Woofers:	165 mm
Mid-range speaker:	165 mm
High-range speaker:	25.4 mm
Volume:	52 Liter
Dimensions (W × D × H):	215 mm × 352 mm × 1060 mm
Net weight:	20.3 kg

You can find further technical data on our website.
Technical changes reserved!

Teufel

Please contact our customer service with any questions, suggestions or criticism:

Lautsprecher Teufel GmbH

BIKINI Berlin

Budapester Str. 44

10787 Berlin (Germany)

Phone 00800 - 200 300 40 (toll-free)

Fax: +49 (0)30 / 300 930 930

Service: www.teufelaudio.com/service

Contact: www.teufelaudio.com/contact

No responsibility is assumed for the correctness of this information.
Technical changes, typographical errors and other errors reserved.



This appliance fulfils the applicable European and national guidelines. This is confirmed by the CE mark (corresponding declarations are kept with the manufacturer).